

## eL-Brutus- Component Identification & Spare Parts List

Refer to the Spare Parts List below. Note that some components are critical and should not be replaced if worn as they will degrade the integrity of the tool beyond safe limits.

Item No.	Component Description	Model #5 (#8-1/4")	Model #7 (1/4"-3/8")
1	Chucking Nut	A1-1	A2-1
2	Anchoring Bolt	A1-2	A2-2
3	Roll Pin	A1-3	A2-3
4	Swivel Nut	A1-4	A2-4
5	Height Adjustment Screw	A1-5	A2-5
6	Screw Anchoring Knob	A1-6	A2-6
7	Retaining Pin	A1-7	A2-7
8	Swivel Head Assembly	A1-8	A2-8
9	3/8" Drive Extension	A1-9	A2-9
10	Sliding Block	A1-10	A2-10
11	Pressure Bearing Thrust	A1-11	A2-11
12	Collar	A1-12	A2-12
13	Set Screw	A1-13	A2-13
14	Sliding Block Assembly	A1-14	A2-14
15	Sliding Bar	A1-15	A2-15
16	Rotating Pin Handle	A1-16	A2-16
17	Handle Rest Pin Assembly	A1-17	A2-17
18	Handle	A1-18	A2-18
19	Storage Compartment Knob	A1-19	A2-19
20	Data Plate & Rivets	A1-20	A2-20

eL BRUTUS SCREW EXTRACTION TOOL - EXPLODED PARTS VIEW

